ARAT Telephone mount for

Type: ROVER, Freelander
Model 1998-2003

Part No: 1259

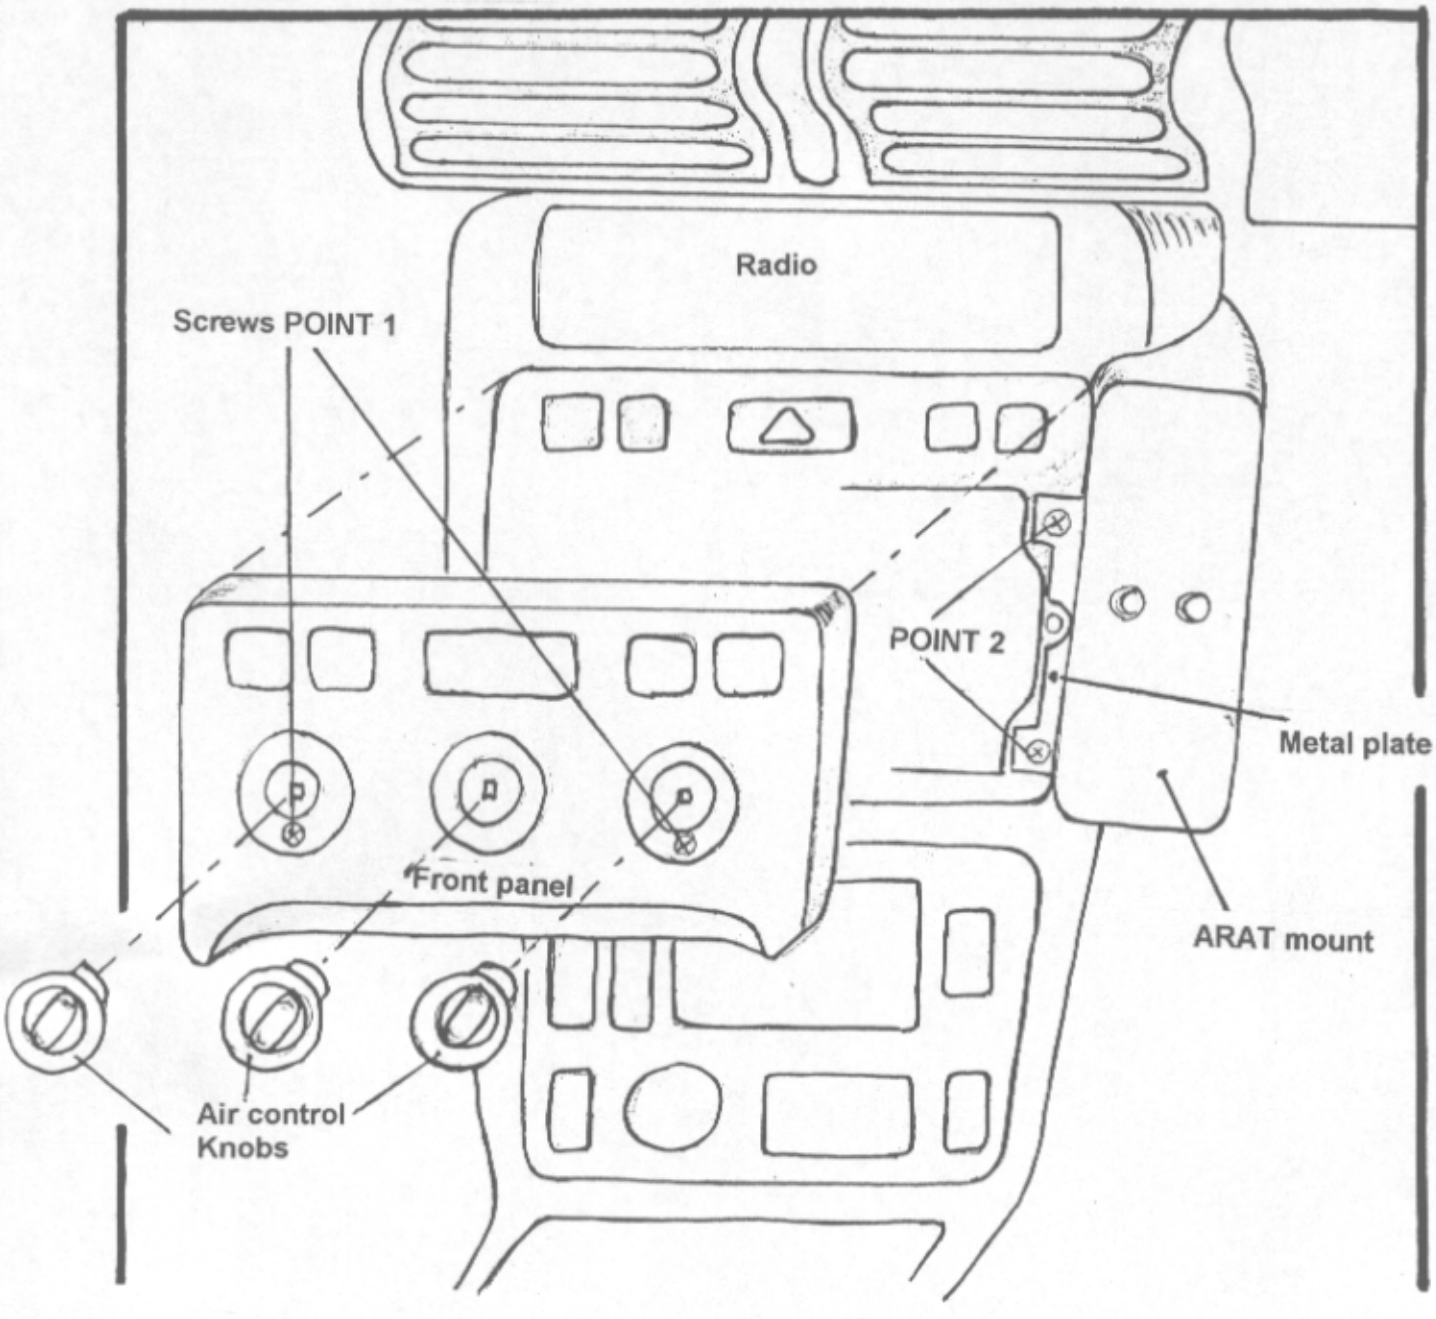

Installation instruction

1. Remove/pull off the air control knobs, and remove both screws at POINT 1
2. Remove the front panel and the screws at POINT 2
3. Place the ARAT mount to the contours of the dashboard, and secure the mount through the metal plate with the previously removed screws
4. Replace the front panel and the air control knobs